

# Operating the Air Suspension

Sample  
Only

Left & Right indicated



Pic a

To inflate the bellows press the button as in picture 'a'



Pic b



To deflate the bellows use left & right buttons as shown in pictures b & c

Pic c



If different pressure is required in each bellow (for example ,when levelling) then alter

## **CUSTOMER IS ADVISED OF GOOD PRACTICE**

**Prior to a journey always check the pressure gauges to ensure recommended inflation pressure. The above advised pressure is an indication only, you may want to alter the pressure to suit your ride. For this type of fitting it is imperative, that the gauges are checked and the air bellows are inflated to at least 3bar, to retain their shape. Failure to keep the bellows inflated, can result in irrecoverable damage.**

**Maximum permitted pressure is 6/7bar. The maximum pressure is permitted for parking and manoeuvring only (not during transit)**

**If you are unsure of any of the above information please contact AS Air Suspension UK Ltd on 01925 740666**

©2017 AS Air Suspension UK Ltd

**This is a Sample ONLY**